Note: Clear parameters must be done in servo OFF. Steps:

- 1. Switch to FPELR I menu.
- 2. Press SET , PCLR J will appeared.
- 3. Keep pressing , then will show a flashing , the will appears finally.
- 4. Restart SV-E3, parameters will reset successfully.